

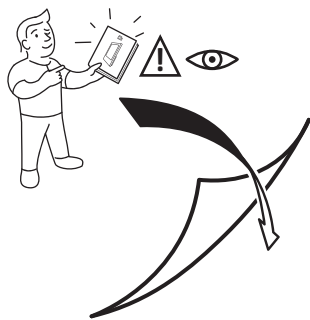
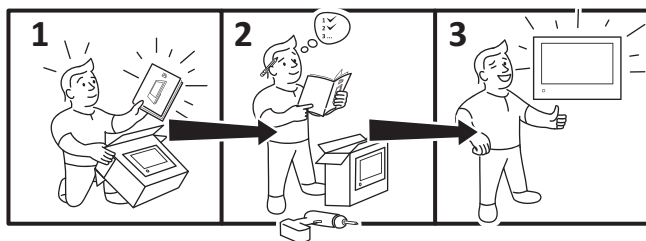
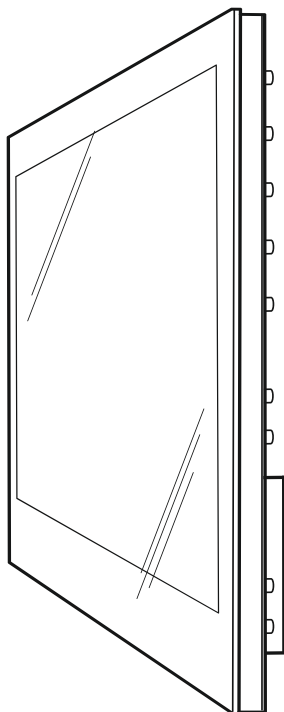
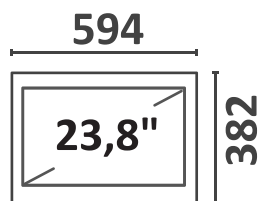


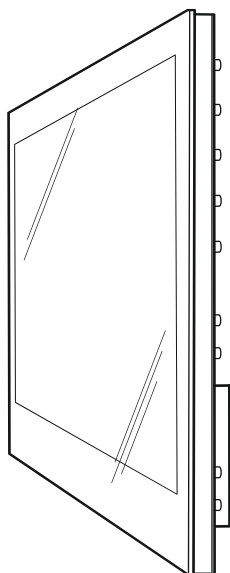

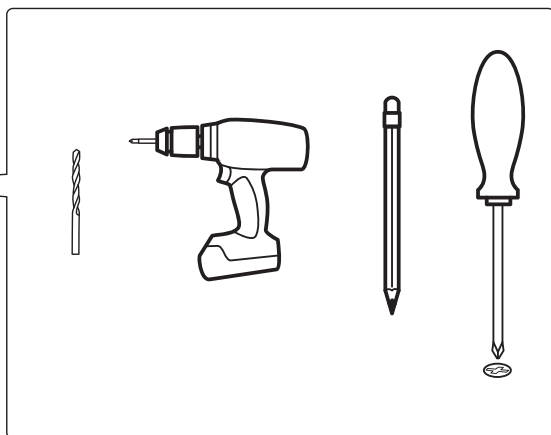

x8

A1

blum

DTC



x8

A2

KESSEBÖHMER

HÄFELE




x4

B




1

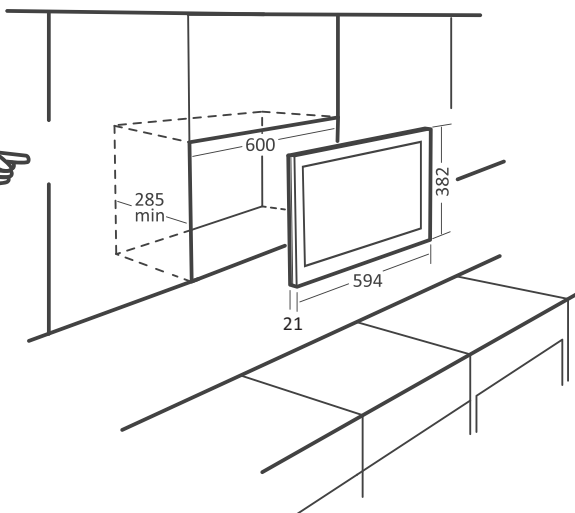

2



A

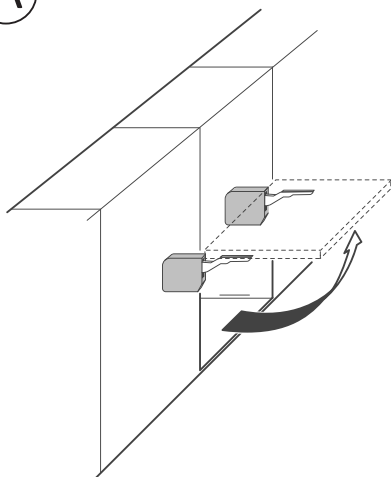

1

blum

Aventos HK27

+

DTCDTC TOP STAY SF
SF00AH02A

2

blum

Aventos HK TOP27

+




3

KESSEBÖHMER

FREEflap forte-E

HÄFELE
Free Flap 3.15 E

B

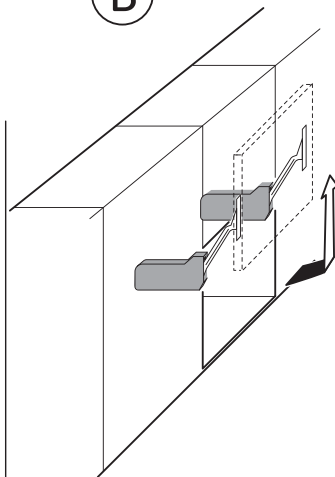

1

blum

Aventos HL27/35

+



2

KESSEBÖHMER

FREEslide Q3us

HÄFELE
Free Up Q3us




A1




blum

Aventos HK27

DTC
Global Quality Benchmark

DTC TOP STAY SF

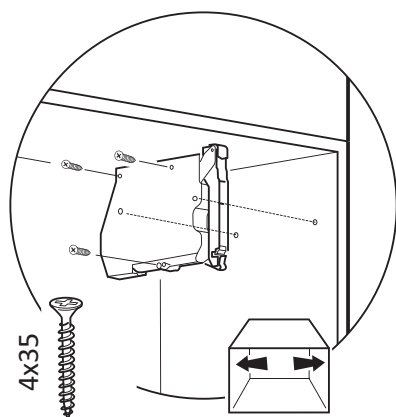
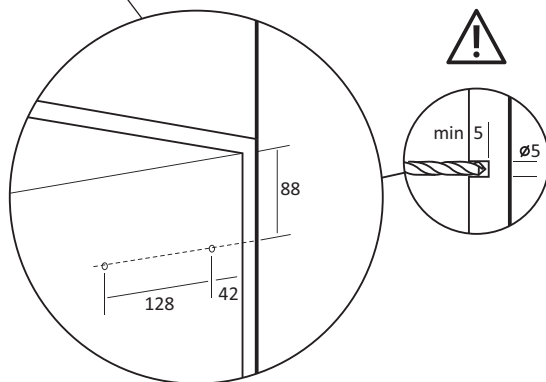
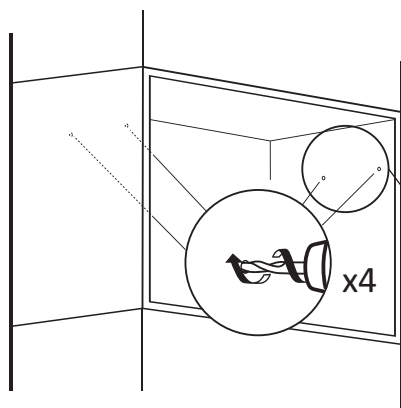


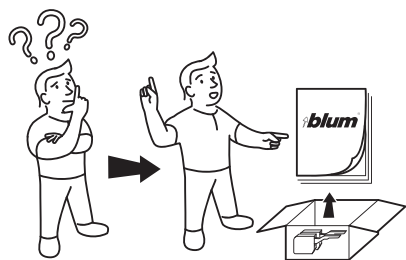
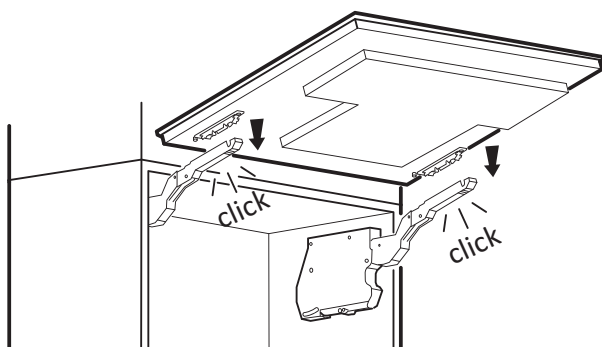
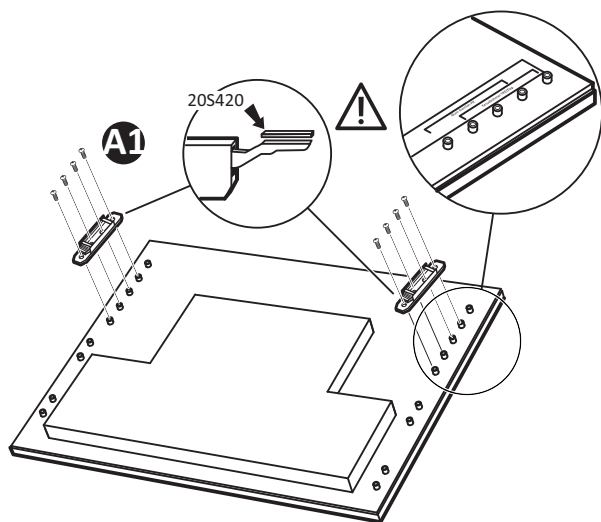


A2

blum

Aventos HK TOP27

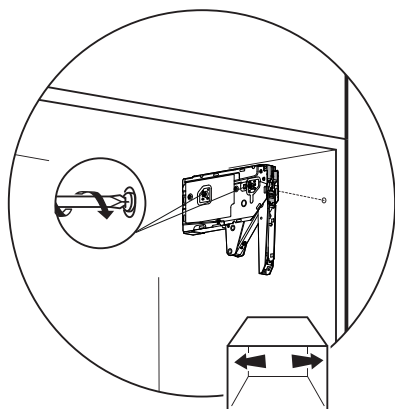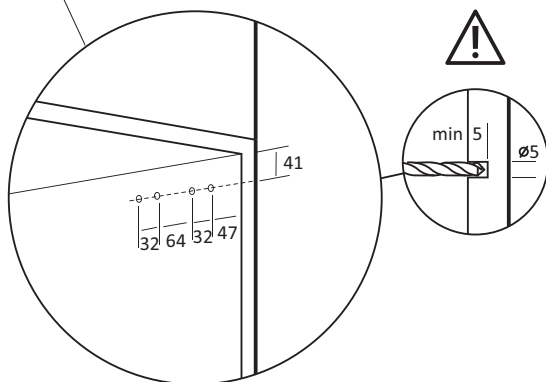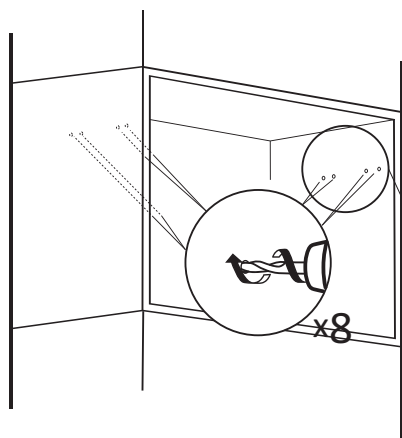


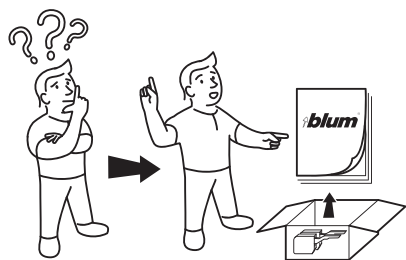
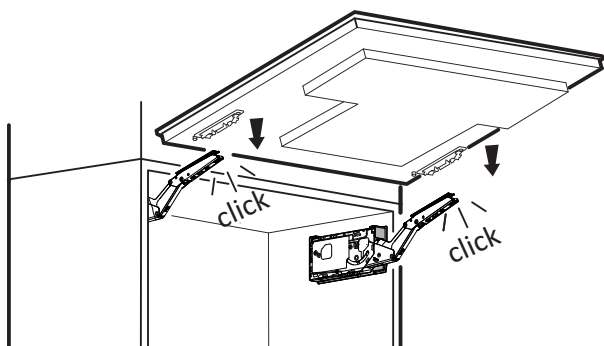
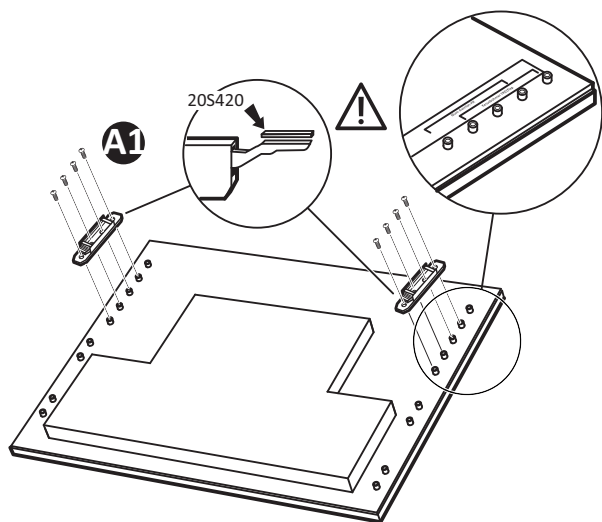


A3

KESSEBÖHMER
FREEflap forte-E

HÄFELE
Free Flap 3.15 E

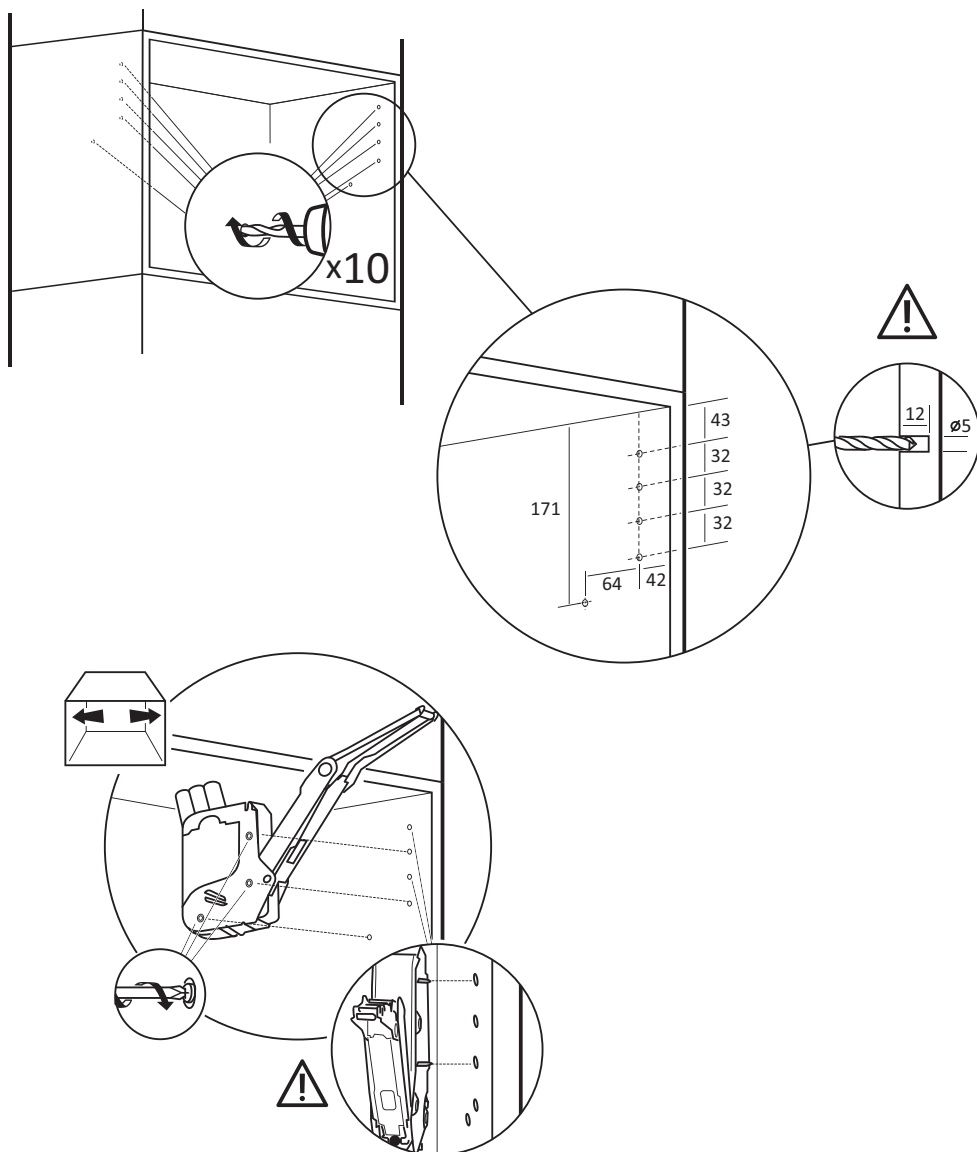



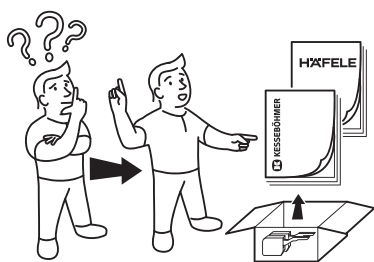
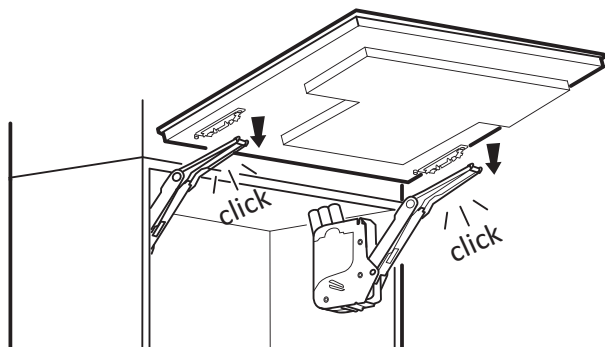
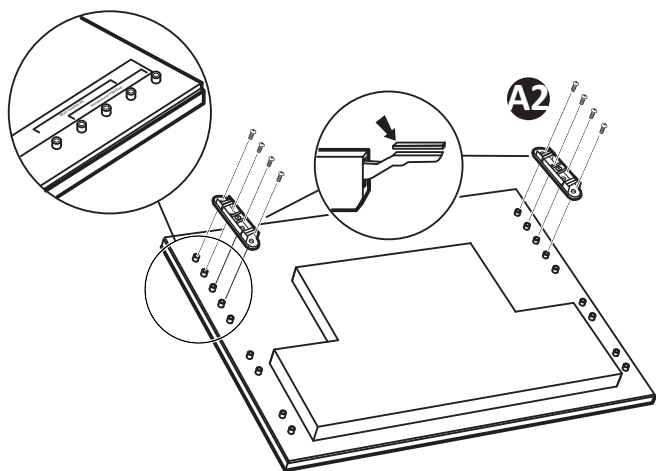


B1

 **blum**

Aventos HL27/35

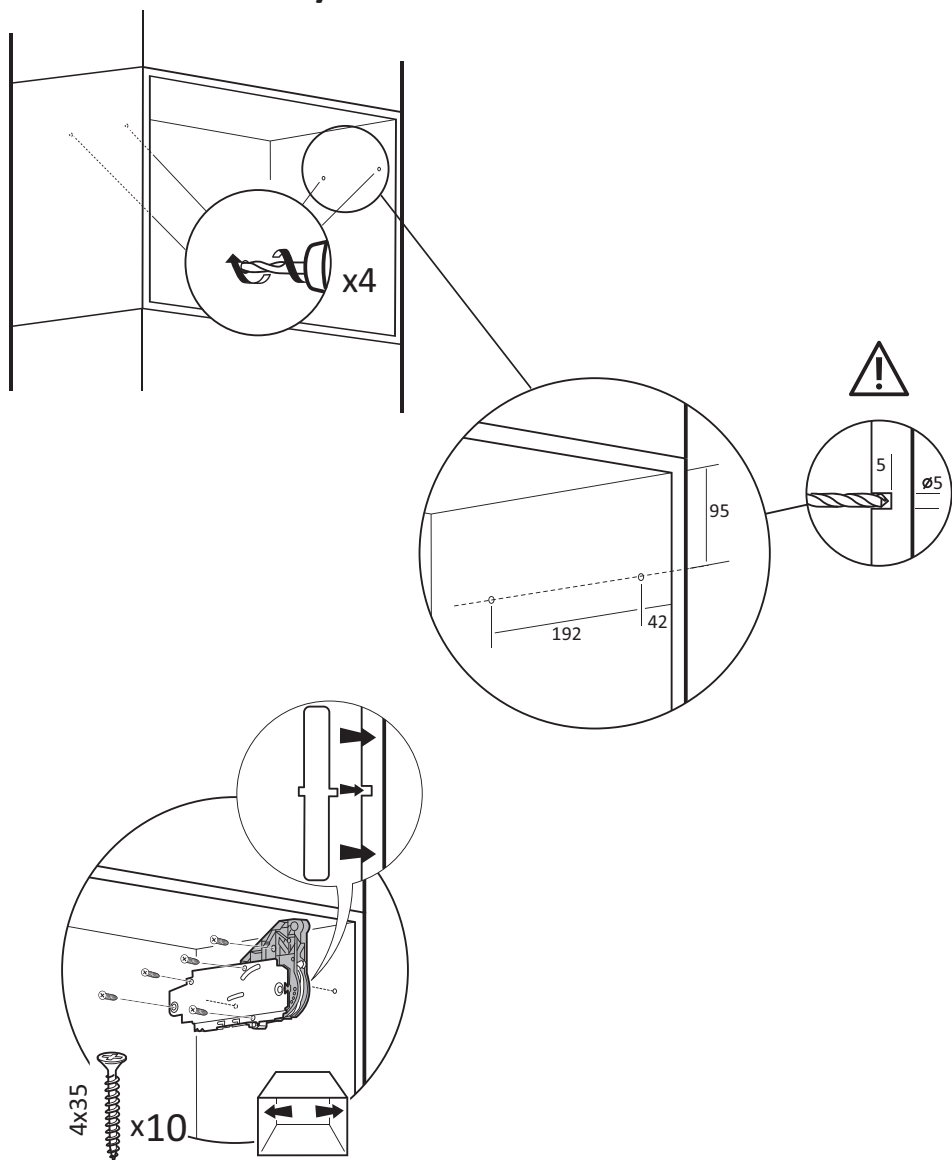


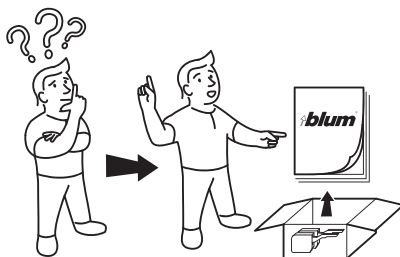
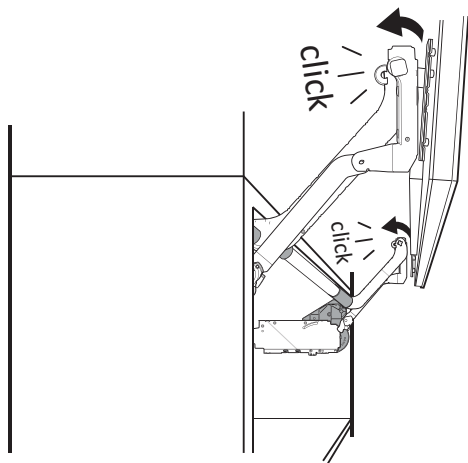
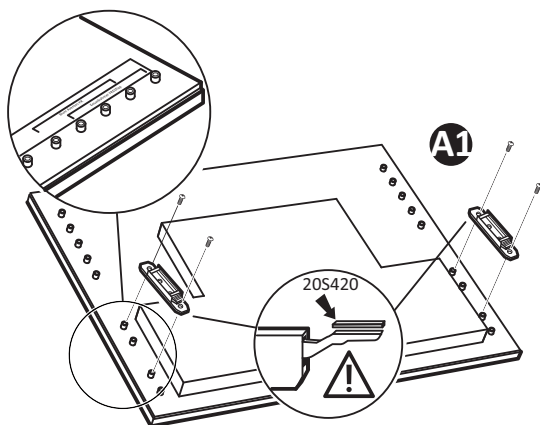
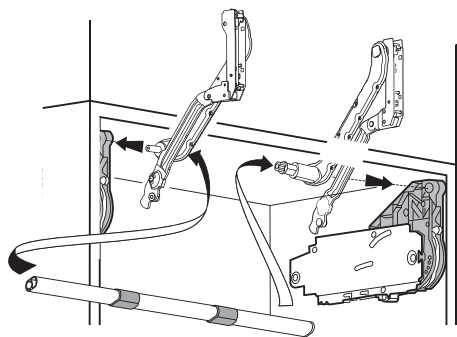


B2

KESSEBÖHMER
FREEslide Q3us

HÄFELE
Free Up Q3us

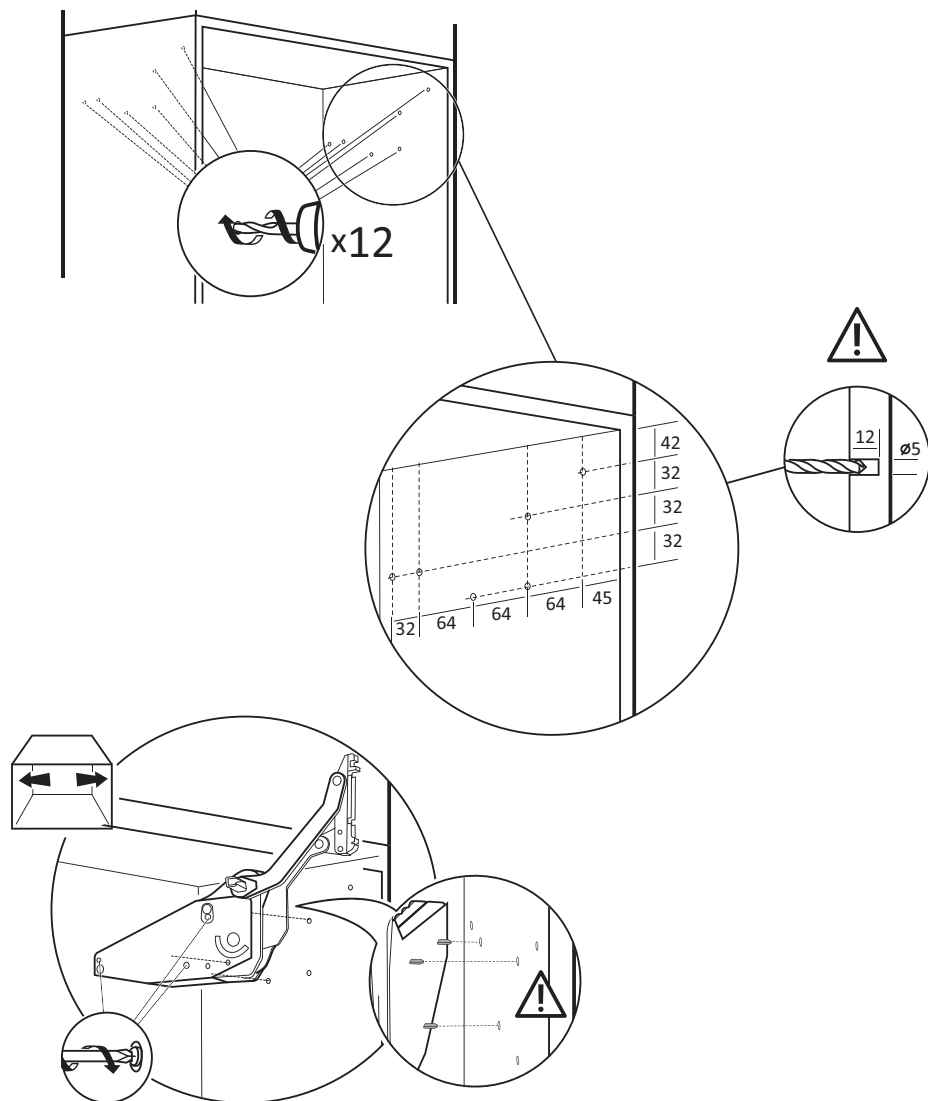


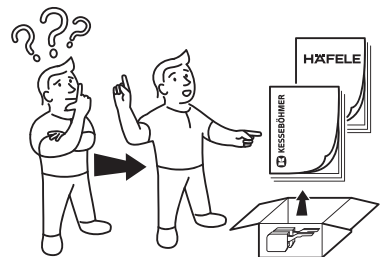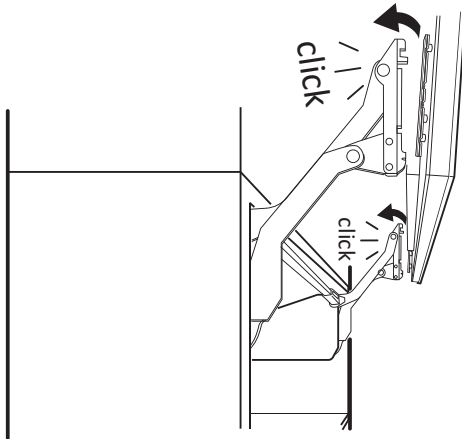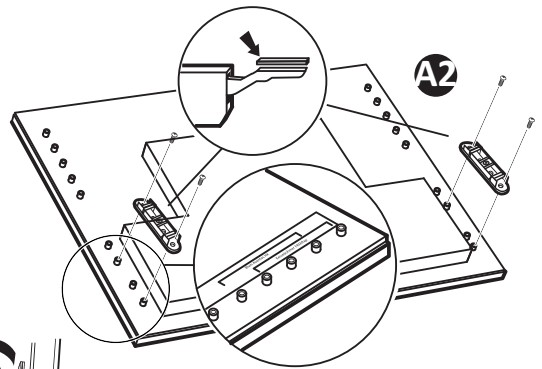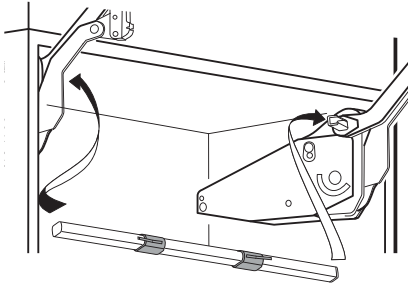


3




A

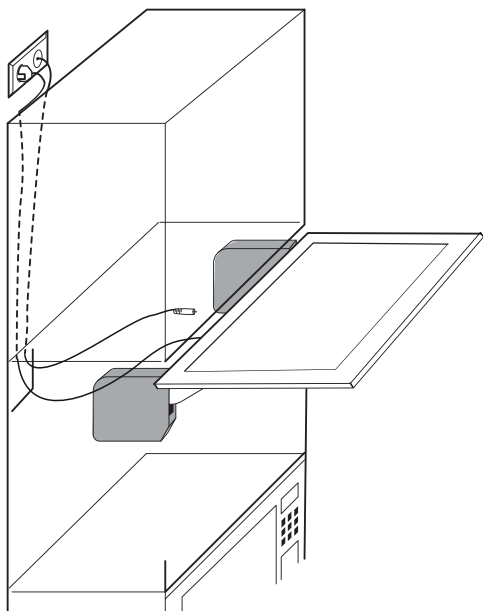



B

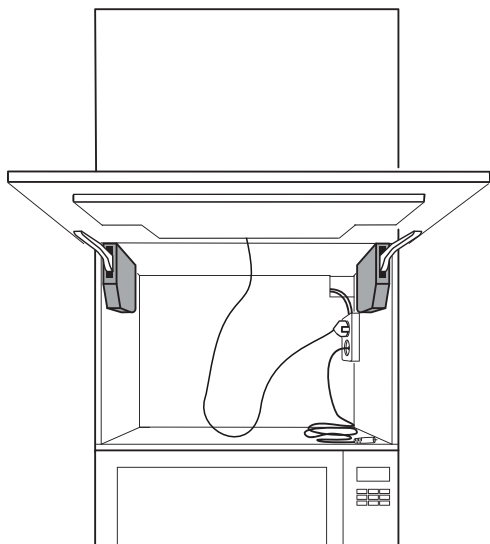





4

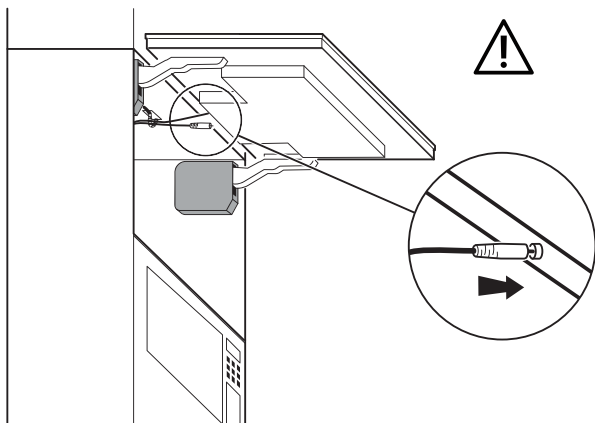

5

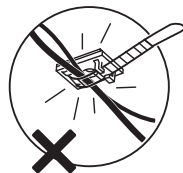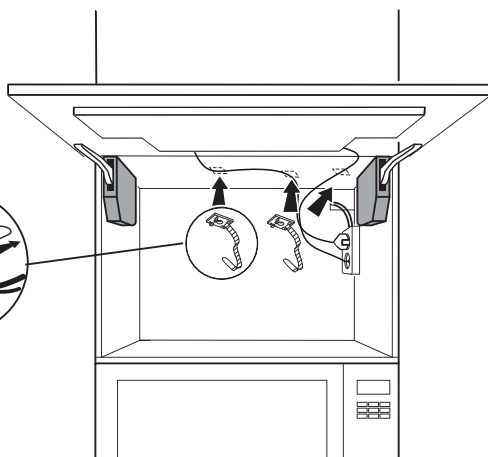


6

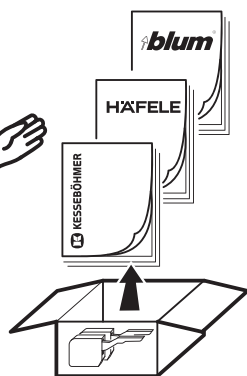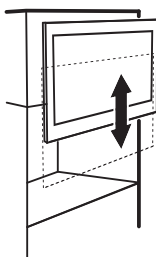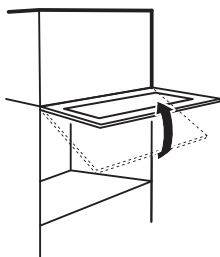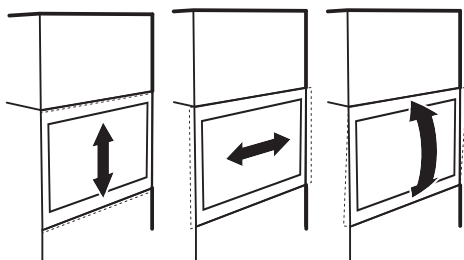

7

A

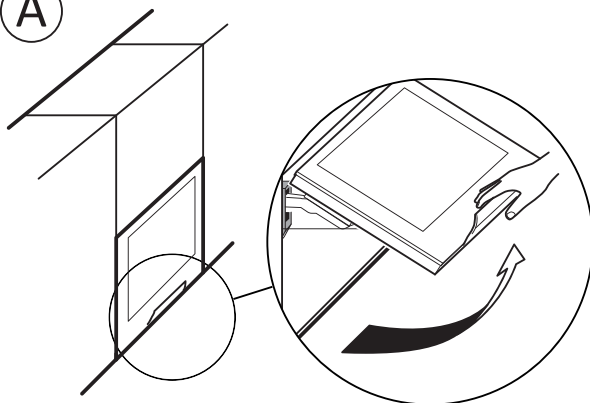

B

